


## FLOC SHED

### INSTALLATION INSTRUCTIONS

1. Place base on ground – ‘front’ is written on the floor.
2. Place the two 100mm packers on one side of the base.
3. Get a side wall and place on top of the packers to make it level with the ground. (make sure the angle on the top flows to the rear).
4. Screw two 100mm tek screws through the predrilled holes on the bottom of the wall.
5. Repeat steps 2 to 4 for the other side wall.
6. Place the back wall on the packers and use square drive screws to attach to the walls.
7. Install the top roof support in the front of the shed.
8. Screw 3 more tek screws into the predrilled holes on each side wall.
9. Fit the header shelf and insert a screw 2/3 of the way in in-front of the shelf to keep it from moving forward.
10. Square up the building by pushing it one way or the other and install the brace with the remaining four tek screws.
11. Fit the door with the square drive screws.
12. Attach the latch.
13. Fit the water diverters into the roof depending on which way you are installing it. (See pictures featured)
14. Secure the roof with the aluminium brackets.

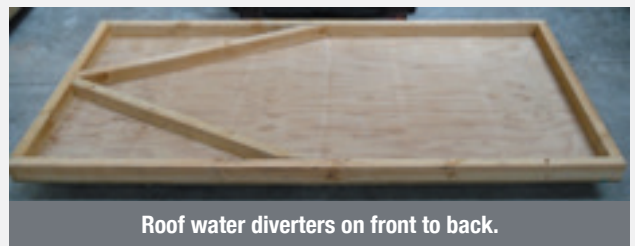

#### ITEMS SUPPLIED

|                                 |                             |
|---------------------------------|-----------------------------|
| <b>14 x 100mm tek screws</b>    | <b>1 x square drive bit</b> |
| <b>70 x square drive screws</b> | <b>1 x tek bit</b>          |
| <b>4 x angle brackets</b>       |                             |